

**PAGEONE COMMUNICATIONS**







**SCRIPTOR™ F/LX2  
USERS GUIDE**









 

 

 
 
 

 

 




	<b>Unlock Message Icon</b>
	<b>Delete Message Icon</b>
	<b>Delete All Messages Icon</b>
	<b>Escape to Main Screen</b>
	<b>Set Alert Icon</b>
	<b>Set Alarm Icon</b>

---

### Other Icons

	<b>Enter Auto On/Off Menu and Auto On/Off Enabled Icon</b>
	<b>Auto On/Off Disabled Icon</b>
	<b>Set Time Icon</b>
	<b>24 Hour Time Indicator</b>
	<b>AM Time Indicator</b>
	<b>PM Time Indicator</b>
	<b>Disable Alarm Icon</b>
	<b>Enable Alarm Icon</b>
	<b>Low Battery Alert Icon</b>
	<b>Out Of Range Indicator</b>
	<b>Message Continuation Indicator</b>
	<b>Press Right Arrow Button Prompt</b>
	<b>Alphanumeric Missing Fragment Indicator</b>
	<b>Long Numeric Missing Fragment Indicator</b>
	<b>Ideoascii or Ideographic Missing Fragment Indicator</b>

---

### Using the Function Menu:

- Press the FUNCTION/SELECT button ● to display the function menu.

The function menu gives you access to the many features of your pager through a series of icons and prompts. For example, when the function menu screen first appears, the TURN OFF icon ☒ flashes, indicating the present position of the cursor. The TURN OFF prompt also appears on the first line of the display. As you move the cursor left or right across the icons, a corresponding prompt appears. To activate your function selection, press the FUNCTION/SELECT button ●.

**NOTE:** To escape from any field without making any changes, press the READ/RESET button ■.

---

### Turning Your Pager Off:

- Press the FUNCTION/SELECT button ● to display the function menu.
- The TURN OFF icon ☒ flashes when this menu item first appears.
- Press the FUNCTION/SELECT button ● to select the TURN OFF function. Press it again to turn your pager off.

---

### **Backlighting:**

- To view your display in low light conditions, turn on your pager's backlight by pressing and holding the FUNCTION/SELECT button ● for 1.5 seconds. If no further buttons are pressed, the backlight automatically turns off when the display goes blank. You can also turn off the backlight by pressing and holding the FUNCTION/SELECT button ● for 1.5 seconds.

---

### **Locking and Unlocking Messages:**

Up to 10 messages can be "locked" in memory, preventing them from being replaced when your pager's memory is full or from being deleted if the DELETE ALL function ☐ is chosen.

- Press the READ/RESET button ◀.
- Select the message you wish to lock by using the left ◀ or right ▶ directional buttons.
- Press the FUNCTION/SELECT button ● to display the function menu.
- Press the right directional button ▶ to move the cursor to the LOCK MSG icon ☒.
- Press the FUNCTION/SELECT button ● to lock the message. The padlock icon ☒ appears, indicating the message has been locked.

---

### **Patent Information:**

This Motorola product is manufactured under one or more Motorola U.S. Patents. A listing of these patents is provided inside the battery compartment which can be seen by removing the battery door. Other U.S. Patents covering this product are pending.

---

### **Scriptor F/LX2 Icon Quick Reference List**

#### **Display Annunciators**

- *Power On Icon*
- ☐ *Auto On/Off Mode Enabled Icon*
- ☒ *Combined Power On and Auto On/Off Mode Enabled Icon*
- 🔔 *Audible Alert Mode Enabled Icon*

---

#### **Message Status Icons**

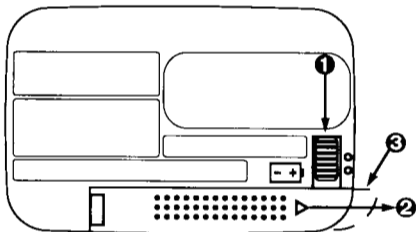 
- ☒ *Lock Message Icon*
- ☒ *Cursor on Locked Message*
- ☒ *Maildrop Indicator*
- ☒ *Cursor on Message Indicator*
- ☒ *Message In Memory Indicator*
- ☒ *Memory Full Indicator (optional)*

---

#### **Function Menu Icons**

- 🔔 *Set Audio Alert Icon (or)*
- 🔇 *Set Silent Alert Icon*
- ☒ *Turn Pager Off Icon*
- ☒ *Lock Message Icon*



the battery.



#### ***Scriptor F/LX2 Rear View (Battery Replacement)***








**CAUTION:** Do not insert the battery backwards or all messages stored and/or locked in memory will be erased.

**NOTE:** If a battery is inserted into the pager for the first time or if the pager has been without a battery for a few days, the backup battery inside the pager will take approximately 12 hours to become fully charged. During this time, all pager settings and messages stored and/or locked in memory will be erased if the battery is removed.


To unlock  a locked  message, use the same procedure outlined above.

---

#### ***Setting the Clock:***


- While in the function menu, move the cursor left to the SET TIME icon  by pressing the left directional button .
- Press the FUNCTION/SELECT button  to display the SET TIME screen. The cursor flashes in the hour position. The left directional button  increments the flashing digits. This is defined by the + icon shown on the display above the button.
- Advance to the desired hour by pressing the left directional button .
- Move the cursor to the minute field by pressing the right directional button .
- Repeat the process for each field hour, minute, AM/PM/24 hr., day/month/year.
- Press the FUNCTION/SELECT button  to initiate the change.

If you move your cursor past the last field in the row (far right), it automatically wraps around and appears at the first function icon in the row (far left).

**NOTE:** To escape from any field without making any changes, press the READ/RESET button .

---

### **Setting the Alert Pattern:**

- Press the FUNCTION/SELECT button ● to display the function menu.
- Press the left directional button ◀ to move the cursor to the alert icon 📞.
- Press the FUNCTION/SELECT button ● to display the SET ALERT screen.
- Move to the desired alert, the selected alert number flashes while a two-second sample of the selected alert plays through the internal speaker. Press the FUNCTION/SELECT button ● to initiate the alert change. **NOTE:** To escape from any field without making any changes, press the READ/RESET button 

---

### **Setting the Alert Mode (Silent/Audible):**

- Press the FUNCTION/SELECT button ● to display the function menu.
- Press the left directional button ◀ to move the cursor to the AUDIBLE MODE 📞 or SILENT MODE 📞 icon.

The AUDIBLE MODE icon 📞 appears if the pager is in the silent alert mode (prompting you to enter that mode, if desired). The SILENT MODE icon 📞 appears if the pager is in the audible alert mode (prompting you to enter that mode, if desired).

---

### **Cleaning Your Scriptor FLX2 Pager:**

To clean smudges and grime from the exterior of the *Scriptor FLX2* housing, use a soft, nonabrasive cloth moistened in a mild soap and water solution. Rinse the surface using a second cloth moistened in clean water. **Do not use alcohol or other cleaning solutions.**

---

### **Repair and Maintenance:**

Your *Scriptor FLX2* pager, properly handled, is capable of many years of trouble-free service. However, should it ever require service, Motorola's National Service Organization, staffed with specially trained technicians, offers conveniently located repair and maintenance facilities worldwide.


---



### **Battery Information:**

**NOTE:** The battery door is hinged and does not need to be removed.

Your *Scriptor FLX2* pager is designed to operate with a AAA-size alkaline battery (do not use carbon zinc batteries). See diagram (across) for battery door location. To in-stall or replace the battery, place the pager face down in the palm of your hand. Then,

 
- ❶ Unlock the battery door by sliding the door latch up with your thumb.
- ❷ Slide the battery door to your right (toward the outer edge).
- ❸ Lift the battery door toward you to install or replace

- Press the FUNCTION/SELECT button  to delete the message.


If your pager is equipped with the **DELETE ALL** feature, *and* you wish to delete all unlocked messages from memory, move the cursor within the function menu screen to the **DELETE ALL** icon  and press the FUNCTION/SELECT button  twice.




 
---


### **Other Features:**



**Low Battery Alert:** A low battery icon  appears in place of the date at the onset of low battery conditions. An audible low battery alert is also heard at that time.

**Duplicate Message:** If the same message is received more than once, **DUPLICATE** appears at the beginning of your new message to indicate that your message has already been received. Your new message will contain the latest time stamp.

**Out of Range:** With this option installed, whenever you are too far away from your paging system's transmitter to reliably receive messages, your pager displays an **OUT OF RANGE** message and an out-of-range icon .

**Alphanumeric, Numeric and Ideoascii or Ideographic Missing Fragment Indicators:** If a portion of the message has not been received, either  or  or  or . Missing Fragment Indicator is displayed.





- Press the FUNCTION/SELECT button  to select the desired alert.


 
If the selected mode is audio , your pager emits a short "chirp." If the selected mode is silent , *and* if equipped with a vibrator, your pager vibrates.

 
 


---


### **Setting the Alarm**


If your pager is equipped with the **ALARM** feature, *and* you wish to set the alarm:

- Press the FUNCTION/SELECT button  to display the function menu.
- Press the left directional button  to move the cursor to the **SET ALARM**  icon.
- Press the FUNCTION/SELECT button  to display the set alarm screen.

When the screen first appears, the cursor is at the left-most position. This icon defines the alarm status: either alarm enable , or alarm disable .

- Press the left directional button to increment or toggle between alarm enable  and alarm disable .
- Press the right directional button  to move the cursor to the hour field.
- Repeat the process for each field (hour, minute).
- Press the FUNCTION/SELECT button  to make the change.





The alarm indicator  appears if an alarm has been set. At the selected time, your pager either vibrates or emits a unique 8-second alert, depending on the alert mode.



**NOTE:** To escape from any field without making any changes, press the READ/RESET button .




---


### **Setting the Auto On/Off function:**


If your pager is equipped with the AUTO ON/OFF feature, and you wish to activate this feature:


- Press the FUNCTION/SELECT button  to display the function menu.
- Press the left directional button  to move the cursor to the AUTO ON/OFF icon .
- Press the FUNCTION/SELECT button  to display the AUTO ON/OFF screen.

When the screen first appears, the cursor will be at the left-most position. This icon defines the AUTO ON/OFF status: either AUTO ON/OFF Enabled , or Disabled .

- Press the left directional button to increment or toggle between AUTO ON/OFF Enable  or Disable .
- Press the right directional button  to move the cursor to the hour field. The auto ON time is shown on the left and the auto OFF time is shown on the right.

- Repeat the process for each field for both the ON time and the OFF time (hour, minute, and AM/PM if your pager is set to display time in the 12 hour mode).
- Press the FUNCTION/SELECT button  to activate the AUTO ON/OFF function.







The indicator  appears in the upper left-hand corner of the display if the AUTO ON/OFF function has been enabled. If the ON time is equal to the OFF time, the AUTO ON/OFF function will not be enabled.

**NOTE:** To escape from any field without making any changes, press the READ/RESET button .

---

### **Deleting Messages from Memory:**

You can clear or delete an unlocked message from memory while you are viewing it, or through the function menu.

- Select the message you wish to delete from memory by pressing the left  or right  directional buttons to the desired memory position.
- Press the FUNCTION/SELECT button  to display the function menu.
- Press the right directional button  to move the cursor to the DELETE MSG icon .
- Press the FUNCTION/SELECT button  to receive confirmation of delete request.