



PAGEONE COMMUNICATIONS



MINITEXT USER'S GUIDE



time the message was received. After a set interval, your pager returns to the Standby Screen.

5. Other Features

Low Cell Battery: When the battery is low and your pager is on, **LOW CELL**  displays and an alert sounds. If your pager is off,  displays. Your pager will continue to operate for five days after you are alerted to the low cell battery condition.

Out-of-Range: An Out-of-Range indicator  is displayed whenever you are out of range of the paging transmitter to reliably receive messages. Your pager can alert you of this occurrence. The Out-of-Range indicator  no longer displays when you return to your transmitting area.

Memo Jazz™ FLX Pager Quick Reference Card

1. Symbols

 or  Power On Indicator

 Set Power Off

 Set Alert Mode

 Set Audible Alert

 Set Vibrate Alert

 Set Chirp Alert

 Set Chirp Off

 Set Pleasing Alert

 Set Pleasing Alerts 1-8 (1-8)

 Set No Alert

 Set Escalert

 Set Alarm Mode/Set Travel Alarm

 Expired Travel Alarm

 Expired General Alarm

 Set Event Alarm

 Phone Directory Message Indicator

 Alarm Message Indicator

 Message Indicator Unselected

 Message Indicator Selected

 Alerts

 Lock Message

 Unlock Message

 Delete All Messages

 Delete Selected Message

 Set Slow Scrolling Speed

 Set Medium Scrolling Speed

	Set Reminder Alarm		Set Fast Scrolling Speed
	Expired Reminder Alarm		Set Line by Line Scrolling Speed
	Set General Alarm		Set Directory
	Memory Overflow		Set Phone Directory
	Memory Full		Set Post-a-Note
	Silent Alert Mode Indicator		Pager Disabled
	Audible Alert Mode Indicator		Set Travel Clock/Alarm
	No Alarm Indicator		Set Time-Date/Set Travel Time
	Alarm Indicator		Maildrop Indicator Unselected
	Duplicate Lock Indicator		Maildrop Indicator Selected
	Lock Indicator		Low Cell
	Low Cell Indicator		Out of Range Indicator
	Message Continued Indicator		Show Service Phone Number
	Enable Entry		Mailbox Unselected
	Disable Entry		Mailbox Selected
	Duplicate Message		

2. Buttons and Indicators



**Mode
Button**











**Select
Button**










**Read/
Power On Button**

3. Setting the Time and Date

① Press and release  until **CONTROLS?**  displays. ② Press . Press and release  until **TIME-DATE?**  displays. ③ Press . Press and release  repeatedly to set the hour. ④ Repeat step 3 to set the minutes, AM, PM or blank for a 24-hour clock, day of the month, and month. ⑤ Press  to save your changes. The Standby screen displays.

4. Reading Messages

① The unread message indicator  flashes. Press  to select the message you wish to read. ② The flashing unread message indicator  changes to  when it is selected. ③ Press . The first line of the message displays. ④ A message continued indicator  displays to the right of the message if the message is longer than one screen display until the time stamp displays. ⑤ Press  to view each consecutive message screen. ⑥ The last screen of the message displays the

29. Repair and Maintenance

Your pager, properly handled, is capable of many years of trouble-free service. However, if service is required, Motorola's Service Organization, staffed with specially trained technicians, offers conveniently located repair and maintenance facilities throughout the world. Please contact your paging service provider or a Motorola sales office for more information.

30. Patent Information




This Motorola product is manufactured under one or more Motorola U.S. patents. A partial listing of these patents is provided on the inside surface of the battery door. Other U.S. patents covering this product are pending.

CONTENTS

1. Buttons	4	16. Types of Messages	29
2. Turning the Pager On/Off	5	17. Reading Maildrop Messages	30
3. Backlight	6	18. Turning the Maildrop Alert On/Off	31
4. Setting the Time and Date	6	19. Deleting a Maildrop Message	31
5. Choosing the Alert Mode	7	20. Storing Messages	32
6. Choosing a Pleasing Alert	8	21. Deleting Messages One-at-a-	
7. Setting Alarms	9	Time	32
8. Choosing the Scroll Speed	15	22. Deleting All Messages at Once	33
9. Setting the Travel Clock	16	23. Automatic Message Deletion	33
10. Setting the Travel Alarm	17	24. Locking/Unlocking Messages	34
11. Phone Directory	19	25. Other Features	35
12. Adding/Deleting a Phone		26. Care of Your pager	36
Directory Entry	22	27. Cleaning Your pager	36
13. POST-A-NOTE	24	28. Battery Information	37
14. Receiving/Reading Messages	27	29. Repair and Maintenance	38
15. Duplicate Messages	29	30. Patent Information	38

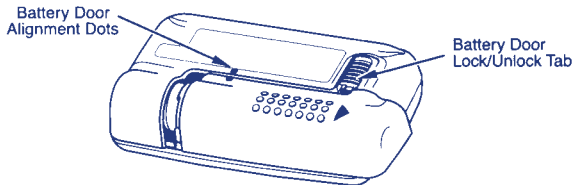
1. Buttons



-  The Mode button can be pressed repeatedly, pressed and held to scroll through available choices, or to increment a value.
-  The Select button is used to select and confirm a value.
-  The Read/Power On button is used to read a message, to save a setting, to turn on the pager, or to turn on the backlighting.



28. Battery Information

Your pager operates with one AAA-size alkaline battery (carbon zinc batteries are not recommended).





To install the battery, slide the locking tab away from the battery door to unlock the door. Hold the pager in both hands and slide the door until the locking tabs release and the dots align. Lift the door until it is free of the housing. Align the battery with the positive polarity matching the illustration on the inside of battery chamber. Insert the battery. To replace the battery door, align the grooves on the battery door with the grooves on the front and back housing. Slide the battery door until it is fully closed. Lock the battery door by sliding the lock tab on the housing toward the battery door.

- Turn your pager off before changing the battery to save messages.

Out of Range: An out-of-range indicator  is displayed whenever you are out of range of the paging transmitter to reliably receive messages. Your pager can alert you of this occurrence. The out-of-range indicator  no longer displays when you return to your transmitting area.

Special Message Icons

- If  displays at the end of the message, there is an error in the message received.
- If  displays at the end of the message, either the message was too long, or there was not enough memory to store the message.

26. Care of Your Pager

To maintain the fine optical quality of the display in the pager, you should not subject the pager to extreme temperatures and moisture.

27. Cleaning Your Pager

To clean the pager housing, use a soft, non-abrasive cloth moistened in a mild soap and water solution. Rinse the surface using a second cloth moistened in clean water. **Do not immerse the pager in water. Do not use any other cleaning solutions.**

2. Turning the Pager On/Off

To Turn On

①



- From the OFF mode, press .

②




- This Startup screen displays momentarily and your pager either alerts audibly or vibrates.

 Startup alert can be skipped by pressing .

③



- The Standby screen displays the time, date and the AUDIBLE alert icon  (or VIBRATE alert icon .

To Turn Off

①

- From the Standby screen, press   to enter the CONTROLS menu.



• Press to set the pager to OFF mode.



• The OFF screen displays without any alert icon.

3. Backlight

• Press and hold for one second or more to activate the LCD backlight.

4. Setting the Time and Date

① • From the Standby screen, press to enter CONTROLS menu (CONTROLS?), then press to enter TIME-DATE mode.



② • Press to increment the hour to your desired value, then press to move to the Minute field.

• Repeat the above procedure for the Minute, A.M./P.M., Date and Month fields.

• Press from any field to set and exit.

When you have locked 10 messages, LOCK FULL displays when you try to lock the next message. To lock the next message, you must first unlock one message.

Unlocking



① • Repeat Steps 1 of *Locking messages*. Press until UNLOCK PAGE? displays and press to unlock message.



② • The lock icon disappears.










25. Other Features

Low Battery: When the battery level is low and your pager is on, LOW CELL displays and an alert will sound if the battery level goes low between 8:00am and 11:00pm. The pager will only display LOW CELL if your battery level goes low between 11:00pm and 8:00am so you won't be disturbed at night. If your pager is off, displays. Change the battery within five days of receiving a low-battery indication.

24. Locking/Unlocking Messages

By locking messages, you can save messages and prevent them from being replaced when memory is full, as indicated by MEMORY FULL. Messages can be locked only while reading them.











Locking

- 1 
 - Press  to select the message to be locked, then press  to read the message
- 2 
 - Press and release  until LOCK PAGE? displays.
- 3 
 - Press . The message is now locked.
- 4 
 - When a locked message is selected or read, the icon  displays on top.

5. Choosing the Alert Mode




You can choose one of four alert modes: AUDIBLE, VIBRATE, CHIRP, or ESCALERT.

 In ESCALERT mode, the alert grows increasingly louder. In AUDIBLE mode you can set a PLEASING alert or NO ALERT.

- 1 • From the Standby screen press  to enter ALERTS menu. Press  again to enter the ALERT MODE menu.
 - 2 
 - Press  until your desired alert mode displays (e.g. VIBRATE).
 - 3 
 - The pager gives off a sample of each displayed alert. Press  to set and exit.
 - 4 
 - The Standby screen displays with the VIBRATE alert icon .

6. Choosing a Pleasing Alert

If you select the AUDIBLE alert mode, you can choose the standard alert, NO ALERT, or one of eight PLEASING alerts.

- From the Standby screen, press to enter ALERTS menu. Press to enter the PLEASING alert menu.
- 
 - Press until your desired alert mode displays (e.g. ARPEGGIO).
- 
 - The pager gives off a sample of each displayed alert. Press to set and exit.
- 
 - The Standby screen displays with the Audible alert icon .

If you choose NO ALERT or VIBRATE, your pager gives off an audible alert only if a priority alert is received. To stop any kind of alert, press any button.

- 
 - Press to delete.

22. Deleting all Messages at Once

The DELETE ALL command deletes all read and unlocked messages and maildrops. Locked or unread messages are not deleted.

- 
 - From the Standby screen press until DELETE ALL? displays, then press to delete all.

23. Automatic Message Deletion

If all message slots are full and a new message is received, the oldest unlocked read message is automatically deleted.

- When the message memory is full, MEMORY FULL displays. Press any button.
- If all messages are unread, the oldest, unlocked message is deleted and OVERFLOW displays.



- While or after reading a maildrop message, press until DELETE? displays .



- Press to delete.

20. Storing Messages

Your pager can store up to 20 personal messages. Each stored message is assigned a number, which displays when the message is stored. The first message received is 1, the second is 2, and so on.

21. Deleting Messages One-at-a-Time



- While or after reading a message, press until DELETE displays.

7. Setting Alarms

There are three types of alarms: REMINDER, EVENT, and GENERAL. If your pager is in OFF mode when an alarm expires, it turns on, alerts according to the alert mode, and remains on. If your pager is in NO ALERT mode, an alarm causes an audible alert.

REMINDER Alarm

A single REMINDER alarm can be set to expire only within 60 minutes or less.

- 1 • From the Standby screen, press to scroll to ALARMS menu, then press to enter. Press again to enter the REMINDER menu.



- Press to increment the delay to your desired value (e.g. 45 minutes).

The delay increments to OFF after 60 MIN.



- Press to set and exit.



- The Standby screen displays with the Alarm icon .



- When a REMINDER alarm expires, this screen displays and the pager alerts. Press any button once to stop the alarm, and again to clear the message.





- This screen displays if the alarm is not stopped during activation. Press any button once to read the message, and press again to clear.

EVENT Alarms

You can set up to three EVENT alarms. Each EVENT alarm allows you to keep a special reminder message that displays when the alarm is activated and your pager alerts.

- From the Standby screen, press  to scroll to ALARMS menu, then press  to enter. Press    to enter the EVENT alarm mode.



- If the message continued indicator  displays to the right of the message, press and release  to view each consecutive message screen.

18. Turning the Maildrop Alert On and Off

You can set your pager to alert when a maildrop message is received.



- While reading a Maildrop message, press  until CHIRP ON? or CHIRP OFF? displays.













- Press  to turn CHIRP ON.

19. Deleting a Maildrop Message












A maildrop message can be deleted with the DELETE command.

17. Reading Maildrop Messages

Maildrop messages are typically news or financial reports which provide information that is important for a short time (a few hours). This pager can store up to five maildrop messages. Maildrop messages are overwritten by the next transmission to its location.

- 1 
 - The unread maildrop message indicator  flashes. Press  to read.
- 2 
 - The flashing unread message indicator  changes to  when it is selected and its maildrop source address displays on the top of the screen. Press  to move to the message you want to read. Press  to read the message.
- 3 
 - The first screen displays the address (e.g. 6) and name of the maildrop source. Press  to read the next screen.



- Press  to choose the EVENT alarm 01, 02 or 03, then press  to move to the next field.
- Press  to enable (+-) the alarm, then press  to move to the next field.
- Press  to choose between alerting (Q) or non-alerting (Q) alarm mode, then press  to move to the Message field.
- Press  to scroll through the characters available, then press  to move to the next.
 -  You can enter up to 14 characters (letters, numbers or spaces). If the message is less than 14 characters long, advance to the rubout character (■) and press  to fill the remaining character fields with blanks.
- At the last character field, press  to move to the alarm Time-Date screen.



- Press to increment the hour to your desired value, then press to move to the Minute field.
- Repeat the procedure to set the Minute, Day and Month fields.
- Press in any field to set and exit.
- The Standby screen displays with the icon.



- When an EVENT alarm expires, the message displays and the pager alerts.
- Press any button once to stop the alarm, and again to clear the message.



- This screen displays if the EVENT alarm is not stopped during activation.
- Press any button once to read the message, and press again to clear.

If an EVENT alarm is disabled, the programmed message is erased.
If an EVENT alarm is set to non-alerting alarm mode (), the programmed message is saved.

15. Duplicate Messages



- If a duplicate personal message is received, the Duplicate icon displays on top.
- Press to view the duplicate message.



- DUPLICATE displays before the duplicate message displays. A duplicate counter (1 - 7) displays next to it (this feature may depend on pre-programming).

16. Types of Messages

The message indicator displayed when a message is received shows the type of message.

- **Personal** and **POST-A-NOTE** messages display (unselected) and (selected).
- **Phone Directory** messages display (unselected) and (selected).
- If **Maildrop** messages are received the following icon, (unselected) or (selected) is displayed at the left first character of the screen. Individual maildrop messages display (unselected) or (selected); and (unselected) or (selected) when maildrop chirp alert is on.



- The first screen of the message displays. If the message is longer than one screen display, a message continued indicator ▶ displays on the top line of each screen until the time stamp screen displays.

- Press to view the next screen.

- Press to view the next screen.



- Press to view the next screen.



- The last screen displays the time and date the message was received. After an interval, your pager returns to the Standby screen.

If a message is unread for more than two minutes, your pager emits a reminder chirp until the message is read. A message is considered read if any screen part of the message is displayed.

You may only set one alarm at a time i.e. you must press when each alarm is completed.

GENERAL Alarms

You can set up to three GENERAL alarms. These alarms can be set to alert either on a daily basis or one-time only.

- 1 • From the Standby screen, press to scroll to ALARMS menu and press to enter. Press to enter GENERAL alarms mode.



- Press to choose GENERAL alarm 01, 02 or 03, and press to move to the next field.

- Press to enable (▶) the alarm, and press to move to the next field.



- Press to choose between alerting (▶) or non-alerting (◻) alarm, and press to move to the next field.

④



- Press to increment the hour to your desired value, then press to move to the Minute field.
- Repeat the above procedure to set the A.M./P.M., Day and Month fields.
- Press in any field to set and exit.

To alert on a daily basis set the Day and Month to --/--.

⑤



- The Standby screen displays with the icon.

⑥



- When a GENERAL alarm expires, this screen displays with the alarm number and your pager alerts.
- Press any button once to stop the alarm, and again to clear the message.

14. Receiving/Reading Messages

When a message is received, your pager either alerts audibly (AUDIBLE, CHIRP, ESCALERT and PLEASING modes) or vibrates (VIBRATE mode). If the NO ALERT mode is selected (under PLEASING), no alert happens for normal messages.

①



- On receiving a message, your pager alerts and the unread message indicator (normal message) flashes. The slot number of the latest message displays on top. Press to read the highlighted message or press to move to the next message

(The flashing unread message indicator changes to when it is selected).

6



- Press to select the desired Alert (0 - 9).

A sample alert is given off for each Alert number. This alert will be heard only if the pager is in AUDIBLE mode.

- Press to save and exit.

7



- When the POST-A-NOTE code is received, the pager gives off a corresponding alert and the pre-programmed message displays on reading the message.

If an incorrect POST-A-NOTE code, or a longer than 2-digit code is sent, the call is interpreted as a numeric message. This feature will not function if additional information is added to the 2-digit code by the service provider or sender. The POST-A-NOTE alert overrides the normal alert setting including VIBRATE and NO ALERT.

7



- This screen displays if the GENERAL alarm is not stopped during activation.
- Press any button once to read the message, and press again to clear.

8. Choosing the Scroll Speed

You can choose the speed at which your messages scroll, or read them line by line.

- 1 • From the Standby screen, press to enter CONTROLS menu, then press to enter the SCROLL SPEED menu.

2



- Press to choose the SCROLL SPEED you desire.
- Press to set and exit.

There are four scroll speeds to choose from: LINE-BY-LINE, SLOW, MEDIUM and FAST.

9. Setting the Travel Clock

You can use the Travel Clock to keep track of your home time when you travel to a different time zone. When activated, a 24-hour Travel Clock displays in the upper left-hand portion of the display.

- ① • From the Standby screen, press to scroll to the TRAVEL menu, then press to enter the TRAVEL TIME mode.



- ② • The Forward Time/Backward Time field flashes. Press to choose between forward (+) or backward (-) time in relation to the current time, then press to move to the next field.

The time set is the time difference from the current time.



- ③ • Repeat the procedure to set the Hour, Minute and the ON/OFF fields.



- ④ • Press in any field to set and exit.



- Press to select the first character of your POST-A-NOTE message, then press to move to the next.

- Repeat the above until you have entered the entire message.

If the message is less than 14 characters long, advance past the numbers to the rubout character (■) and press to fill the remaining slots with blanks.

- At the last character press to move to the next screen.

- Press to select the desired first digit of the POST-A-NOTE code, then press to move to the next.

- Press to select the second digit, then press to proceed to the next field.

This is the code the caller sends to activate the message.




- Press to disable (--) this entry, then press to delete it and exit.

13. POST-A-NOTE

Use POST-A-NOTE to create upto five brief messages that callers can send you by sending a 2-digit message. On receiving a matching 2-digit message, your pager alerts and displays the associated POST-A-NOTE message. This 2-digit message can be from 00-99. You can enter a 14-character message for each POST-A-NOTE. A caller may send only a single POST-A-NOTE at a time. Any additional messages must be sent on another call.

Defining a POST-A-NOTE

- Press to scroll to DIRECTORY menu, then press to enter it. Press to enter POST-A-NOTE mode.
- 
 - Press to select the desired slot number, then press to move to the next field.
 - Press to enable (-| -) this entry, then press to move to the Message field.




- The Standby screen displays with the Travel Clock time on the top left corner.

Setting the 24-hour travel clock to a zero time difference provides both a 12-hour and a 24-hour clock display on your pager. When messages are received the travel clock display toggles with the number of unread messages every second until all the messages are read.

10. Setting the Travel Alarm

When you want to set an alarm based on your home time instead of the local time you can use the Travel Alarm.

- From the Standby screen, press to scroll to TRAVEL menu, then press to enter TRAVEL ALARM mode.
- 
 - Press to choose between alerting (Ⓚ) or non-alerting (Ⓚ) alarm, then press to move to the next field.
 - Repeat the procedure to set the Hour and Minute fields.
 - Press from any field to set and exit.



- The Standby screen displays with the icon.



- When a TRAVEL alarm expires, this displays and your pager alerts.
- Press any button once to stop the alarm, and again to clear the message.

If your pager is off when an alarm expires, it turns on, alerts and remains on.



- This screen displays if the TRAVEL alarm is not stopped during activation.
- Press any button to read the alarm message, and again to clear the message.

The Travel Clock and TRAVEL alarm display in 24-hour time only.



- Press to select the first character of the Message field, then press to move to the next field.

- Repeat the above step until you have entered the entire message.



- At the last character, press to set and move to the Phone Number screen, or press in any field to set and exit.

Deleting an Entry

PHONE-DIR entries are deleted when disabled. You may also edit an entry and erase the characters using the rubout characters.

- Press to scroll to DIRECTORY menu, then press to enter it. Press to enter PHONE-DIR mode.




- Press to select the PHONE-DIR entry you want to delete (e.g. 02 JOHN), then press to move to the the Enable/Disable field.

7



- When reading a received message that matches (e.g. 6530828) a PHONE-DIR number reference, the associated PHONE-DIR message (WENDY) displays before it.

 *If any additional characters are added to the phone number by the service provider or sender, the pager will not do a match with PHONE-DIR entries.*

12. Adding/Deleting a Phone Directory Entry

Adding an Entry

A received numeric message can be entered directly into the PHONE-DIR without going through the usual full procedure of entering it.

- 1 • While reading a message, press  until PHONE-DIR? mode displays and press  to enter it. The next available slot is automatically assigned and the message is stored.

 *Any alpha characters of the message are automatically stripped off before storing.*





11. Phone Directory

The PHONE-DIR is a reference for up to eight entries, each with a name, associated phone number and special alert. Each name can be up to eight characters long and each phone number must be from three to 13 digits long. No spaces or hyphens may be entered. You can also set your pager to block out pages from specific numbers in the PHONE-DIR. When a new numeric message is received, it may be added to your phone directory while reading the message.

- 1 • Press  to scroll to DIRECTORY menu and press  to enter, then press   to enter PHONE-DIR mode.

2



- Press  to choose the desired Slot number (01 - 08), then press  to move to the next field.
- Press  to enable (-|-) the entry, then press  to move to the Message field.

③



- Press to select the first character, then press to move to the next.
- Repeat the above step until you have entered the entire message.

If the message is less than eight characters long, advance past the numbers to the rubout character (■) and press to fill the remaining slots with blanks.

④



- At the last character press to move to the Phone Number screen.

⑤



- Press to select the first digit, then press to move to next.
- Repeat the above step until you have entered the entire phone number.

If the telephone number is less than 13 digits, advance to the rubout character (■) and press to fill the remaining slots with blanks. Spaces cannot be entered in phone numbers.

- At the last digit press to move to the Alert field.

⑥



- Press to select the desired Alert (0 - 9), or " - " for page blocking.

The pager gives off a sample alert each time is pressed. This alert will be heard only if the pager is in AUDIBLE mode. The page blocking feature prohibits pages from the entered numbers.

- Press to set and exit.