

TH Communications

***POCSAG ZOOM 2/4 LINE DISPLAY
ALPHANUMERIC PAGER
RT760***

 
USERS MANUAL









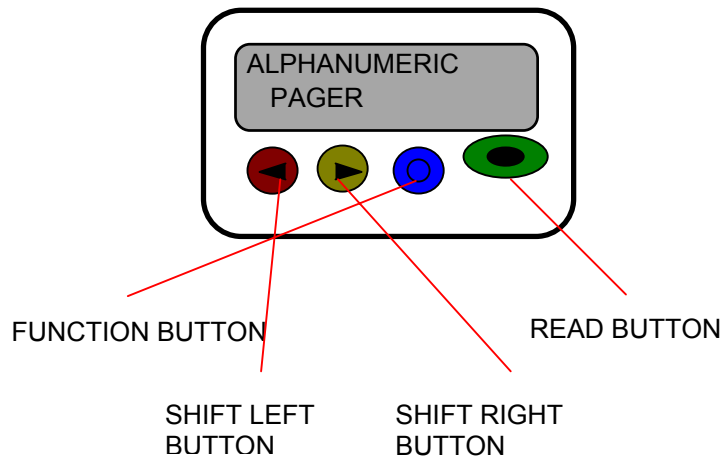

Features:

















- Smart LCD screen that displays 108 x 32 dots, 4 lines for English display, 2 lines for bigger character
 - Message Capacity (Total 15,000 characters of English
 - * Personal message: 20 set messages, dynamic characters memory per message
 - * Mail-Drop message: 48 sets mail drop, dynamic characters memory per message
 - Four lines normal size Alpha display, 4x18 = 72 English characters per screen
 - Two lines bigger size Alpha display, 2x14 =28 English characters or 16 Chinese per screen
 - Memory retention, memory back-up under main battery replacement
 - Unread message remainder alert every 3 minutes
 - Custom selectable power-on LCD screen display function
 - Timer function (down or up Timer)
 - Battery voltage measuring function
 - Date and Time display
 - Date and Time Stamping of message
 - Message Lock function
 - Duplicate message indication
 - Message full indication
 - Message error indication
 - Low battery indication
 - Option to delete individual message or erase all
 - Selectable alert mode, 4 kinds of beep tones, 10 kinds of Melodies, vibration and silent
 - Alarm function, 3 sets of alarms with 10 event setting
 - Adjustable LCD contrast
 - Illumination backlight for easy night ready
 - Automatic power on/off (silent receiving)
-

1. Outward & Icons:



Icons

 
-  In-Range indicator
-  Tone Alert Indicator
-  Vibration alert Indicator
-  Silent Alert Indicator
-  Unread Message Indicator
-  Next Page Indicator
-  Low Battery Indicator
-  Alarm Function Active Indicator

-  Lock or Unlock Message
-  Escape
-  Set Alert
-  On / Off Set
-  Set Time
-  Duplicate Message
-  Silent Receiving
-  Set Vibrator Alert
-  Set Alarm
-  Auto On / off set
-  Timer
-  LCD contrast adjustment
-  Power on Indicator
-  Duplicate Message Indicator
-  Unread Message Indicator
-  Message Lock (Protect)

3. Operation Description:

- **Turn on the pager**



Insert one AAA battery

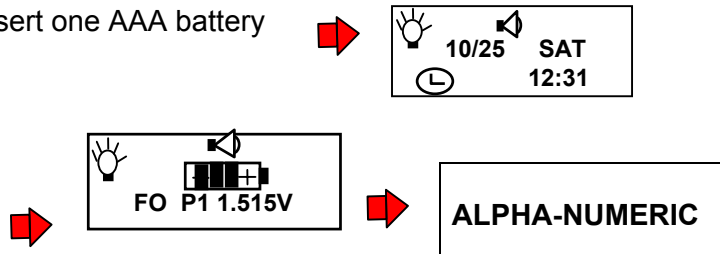

- **FUNCTION OPERATION**

3.1. Time Date And Week setting:

  Press the « Function Key » twice under the stand by mode
Press « Shift right key » four times




Press « Function Key »



Press « Shift right key »



 Press « Function key »



Press « Function Key » to set the right data, and
Press « Shift key » to move the cursor, then press
« Read Key » to return to stand-by mode after setting
« hour », « minute », « date » and « week »

3.2. Alert Function

 
Press « Function Key » twice under stand-by mode:



Press « Shift right key »




Press « Function Key »



Press « Function Key » to change the alert
And press « Shift key » to move the cursor




 Page 5:

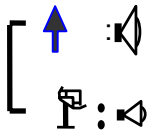

Personal Message Alert

 Public Message Alert

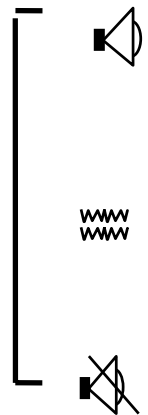

→ Sound alert - Tone and music (15)

→ Indication

→ Indicator

→ Indicator

3-3. ON / OFF Pager:

« OFF »



Press « Function key » twice under the stand by mode



Press « Shift right key » twice



Press « Function key » to OFF the pager



« ON » Same as above steps.

3-4. Delete Message

Press « Function key » twice under stand-by mode



Press « Shift right key » three times



Press « Function key » to delete all messages
In the memory except that unread and protected
messages.

3-5. Alarm Set:

Press « Function Key » twice under stand-by mode



 
Press « Shift right key » four times



Press « Function key » and then press
« Shift right Key » twice



Press « Function key »



Press « Shift key » to move the cursor and
Press « Function Key » to set the data



Alarm Set: 1 – 3
Hour: 1 – 24
Minute: 00 – 59



: Alarm Indicator

And then press « Read Key » to return to stand-by mode

3-6. AUTO ON/OFF SET

Press « Function Key » twice



Press « Shift Key » four times



Press « Function Key » and then press « Shift Key » three times



Press « Function Key »



Press « Shift Key » to move the cursor and Press « Function Key » to set the ON/OFF time And ~~OFF~~ OFF or ON, then press « Read Key » To return to stand-by mode

3-7. Timer Set:

Press « Function Key » twice



 
Press « Shift right key » four times



Press « Function Key » and then press « Shift Right Key » four times




Press « Function Key »




 - Down Counter

Press « Shift Key » to move the cursor and press « Function Key » to set the data and stop or start

 - Up Counter

the counter, press « Read Key » to return to the stand-by mode

 - STOP

 - START

Page 9:

3-8. LCD Contrast Adjustment

Press « Function Key » twice



 
Press « Shift right Key » four times



Press « Function Key » and then



Press « Shift right key » 5 times, and then
Press « Function key »



Press « Function key »
Press « Function key » to adjust 1-21 for LCD
Contrast and then press « Read key » to return
to Stand-by model




Page 10:

3-9. 2/4 Line display set:

Press « Function key » twice



 Press « Shift right key » 6 times



Press « Function key »



2 LINE




2 line display or press « Function key »
To select 4 line display, Press « Read key »
To return to stand-by mode



4 LINE

- **Message receiving alert**

Pager will alert the user accordingly to the alert set by the user (tone, music, vibration or silence)

When the message has been received, and pager will display  on the right top corner of LCD,

And if the message is duplicate, then a  indicator will be shown beside the 

- **3 Minutes unread alert**

Pager will alert user every 3 minutes if there is any message has not been read by the user

- **Alarm function alert**

Pager will alert and display as below when the alarm time arrived, then press « Read key »
To return to stand-by mode.



- **Back light function**

Press and hold « Read key » for 2 seconds while reading the message, then the back light
Will be on to help reading under the dark condition. The backlight will be off automatically
and return to the stand-by mode.

- **Low battery indicator**

Please replace a new battery ASAP when the low battery indicator has been shown on the
LCD.

4. Battery Replacement

4-1. Type of Battery -

Please user a good quality of AAA Alkaline 1.5V battery

4.2 Please Change a New Battery A.S.A.P-

When battery icon indicator has been displayed on the LCD of the pager 

4.3 Battery Replacement

- A. Take out the battery cover according to the maker on the battery cover (dot and arrow)
- B. Then replace a new battery to the pager, (look out the ` + ` and ` - ` sign)
And then recover the battery cover to the pager